HOSHIZAKI



1. Install the ice maker properly in accordance with


the instructions on location, water supply/drain connections and electrical connections stated in the instruction and installation manuals provided.


2. The ice production depends on the ambient and water temperatures. Refer to the instruction manual.

🕸3. Use a coolimg tower for cooling water.

34. Product Code: F083-C120 F083-C122(SB Type)

AIR ICE DISCHARGE HOLE $\overline{(BOTTOM)(154 \times 79)}$ 700 AIR \triangleleft 分 AIR 281 (17) 560

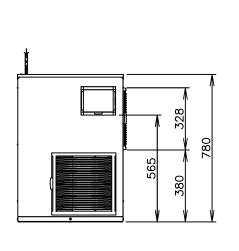

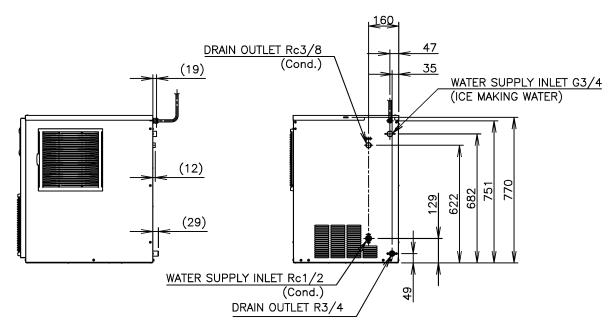

	L MMINED EM	COOMMZE	CD)	Γ Λ α ο . σ	 [, , p, o,]
HOSHIZAKI FLAKE IC	L MANEK FW	-buuawke(-	-2D)	LAuger	i ypei®l